



(Usually 3 screws will be sufficient to secure the base plate properly. Be aware that certain surfaces may require additional fixings)

2. Screw the bracket onto the base plate until it is firmly against the wall and secure the pole with the small 30mm screw from beneath.

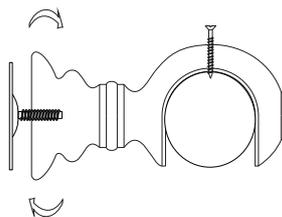


1. Remove the metal base plate from the bracket and fix to the wall in the correct position using the wall plugs and screws provided.

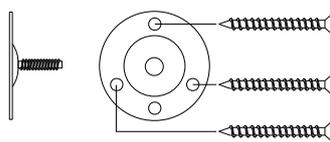

Wooden Cup Bracket:

Screw directly into the end of the pole. Tighten to a snug fit, but do not use excessive force.

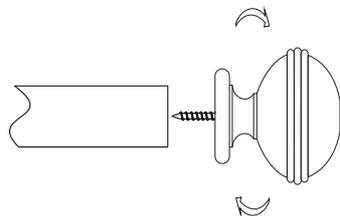

Finials & End Stops:




Fitting Instructions

Please note:

The screws and fittings supplied here are general purpose items and are included in good faith only. The conditions of use are beyond our control and therefore these items may **not** be suitable for all wall types.


It is the responsibility of the fitter to ensure that all screws and fixings used are safe and suitable for the job.

(The contents of this package may vary depending on the items you have ordered)

	Plug
	30mm
	40mm
	50mm


2. Secure the pole by gently tightening the decoration on the front.

1. Mark the required position and secure to the wall using wall plugs and 40mm screws.

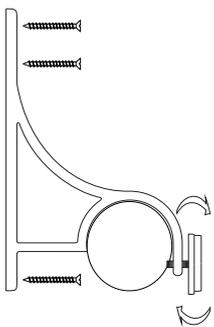


Brass and Chrome Brackets (all styles):

2. Secure the pole with the small 30mm screw from beneath.

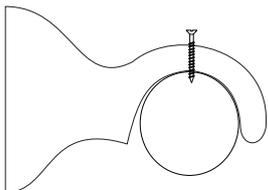


1. Mark the required position and secure to the wall using 2 x wall plugs and 2 x 50mm screws.

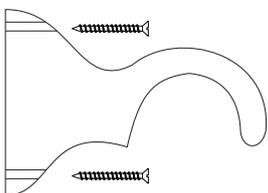


Wooden Flat Bracket:

Tieback:

1. Remove the metal base plate from the tieback stem and fix to the wall in the correct position using the wall plugs and screws provided.

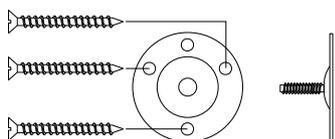

2. Screw the tieback stem onto the base plate until it is firmly against the wall.

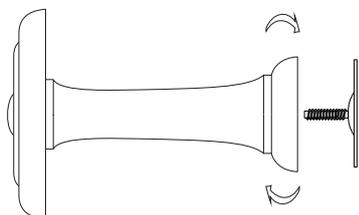

Recess Socket:

1. Mark the required position on the wall. Fix using a single wall plug and a 50mm screw.

